

DECORATIVE SLAT WALLS

STEP 1

Measure the height of your wall and divide by the height of the slat.

Height: 108"

Divide: $108" \div 94" = 1.15$

STEP 2

Measure the width of your wall and divide by the width of the slat wall kit.

Width: 125"

Divide: $125" \div 75.688" = 1.65$


Round Up: 2 packs wide

STEP 3

Multiply number of slats high by number of slat wall kits wide.

$1 \times 2 = 2$ packs


Since we rounded up on Step 2, you can use the extra slats to finish off the top of your Decorative Slat Wall.

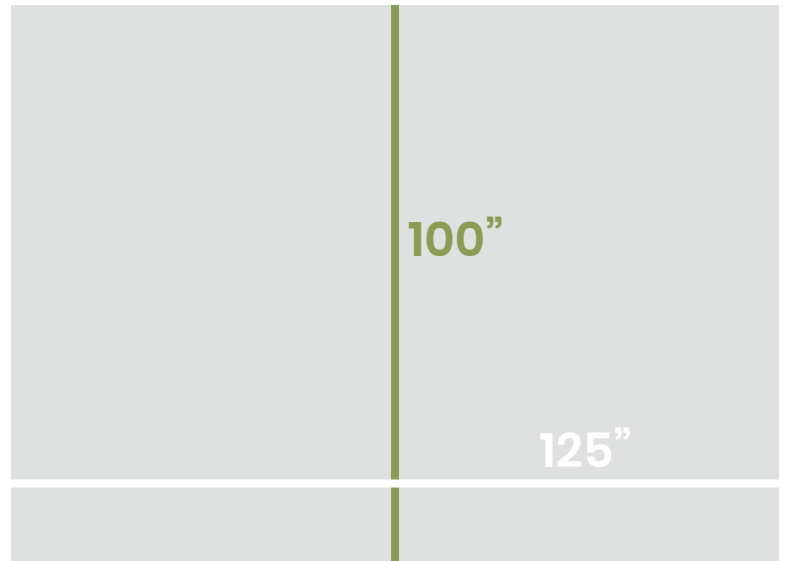

Bridgeport

This assumes a 1" space between each slat and 1" at the end.

Width: 75.688"

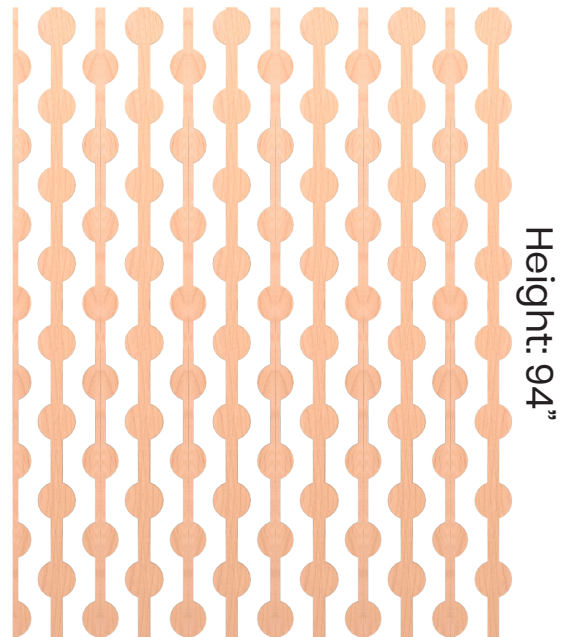

EKENA
MILLWORK