

HERITAGE PREMIER

SOLID HARDWOOD SLAT WALL KITS

STEP 1

Measure the height of your wall and divide by the height of the slats.

Height: 100"

Divide: $100" \div 94 \frac{1}{2}" = 1.06$

STEP 2

Measure the width of your wall and divide by the width of the slat wall kit.

Width: 125"

Divide: $125" \div 40" = 3.125$



Round Up: 4 kits wide

STEP 3

Multiply number of slats high by number of slat wall kits wide.

$1 \times 4 = 8$ packs

Since we rounded up on Step 2, you can use the extra slats to finish off the top of your Heritage Premier Slat Wall.

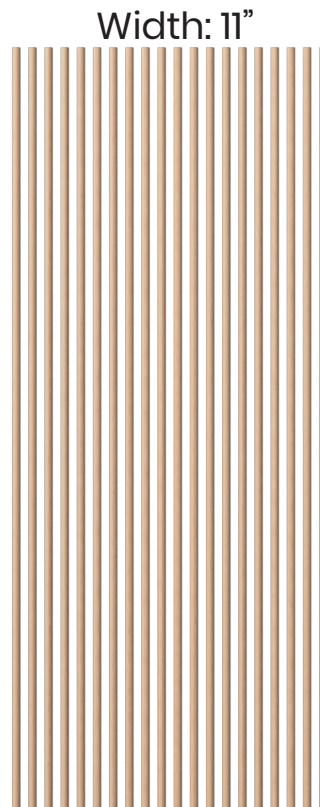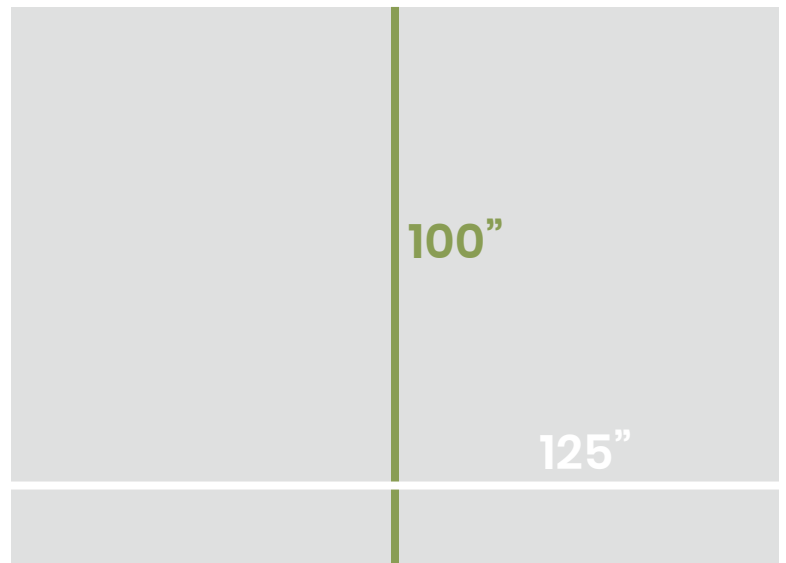

Traditional 1"
This assumes a 1" space between each slat and 1" at the end.



EKENA
MILLWORK